

FlexPoint® DC Converter User Manual



DESCRIPTION

The FlexPoint DC Converter, model 4384, allows any FlexPoint media converter to be powered from an 18 to 60VDC power source.

[See product page for Chassis, Power and Mounting options for FlexPoint modules.](#)

SITE PREPARATION REQUIREMENTS

The over current protection for the connection with centralized DC shall be provided in the building installation and shall be a UL listed breaker rated at 20 Amps, and installed per the National Electrical Code, ANSI/NFPA-70 and the Canadian Electrical Code, Part I, C22.1.

The DC Converter requires 18 to 60VDC/1.0 Amps power.

Appropriate overloading protection should be provided on all DC power source outlets utilized.

WARNING: Only a DC power source that complies with safety extra low voltage (SELV) requirements can be connected to the DC-input power supply.

WARNING!!!
NEVER ATTEMPT TO OPEN THE CHASSIS OR SERVICE THE POWER SUPPLY. OPENING THE CHASSIS MAY CAUSE SERIOUS INJURY OR DEATH. THERE ARE NO USER REPLACEABLE OR SERVICEABLE PARTS IN THIS UNIT.

- WARNING REGARDING EARTHING GROUND:**
- o This equipment shall be connected to the DC supply system earthing electrode conductor or to a bonding jumper from an earthing terminal bar or bus to which the DC supply system earthing electrode is connected.
 - o This equipment shall be located in the same immediate area (such as adjacent cabinets) as any other equipment that has a connection between the earthed conductor of the same DC supply circuit and the earthing conductor, and also the point of earthing of the DC system. The DC system shall not be earthed elsewhere.
 - o The DC supply source is to be located within the same premises as this equipment.
 - o There shall be no switching or disconnecting devices in the earthed circuit conductor between the DC source and the earthing electrode conductor.

MOUNTING


Assure that the FlexPoint DC Converter is physically installed in accordance with the *Site Preparation Requirements* outlined earlier in this document.

Securely attach the FlexPoint DC Converter to a FlexPoint media converter using (4) phillips-head screws (refer to illustration).

NOTE: Some FlexPoint models have a grounding screw on the back of the unit that will need to be removed before attaching the DC Converter.

If desired attach the optional wall-mounting brackets (part number 4381) and securely fasten to desired location (refer to illustration).


Locate the DC circuit breaker and switch the circuit breaker to the OFF position.

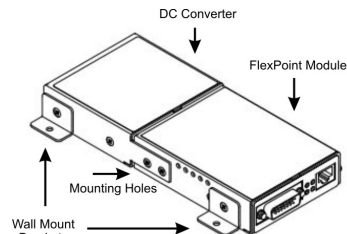

Prepare a power cable using a three conductor insulated wire (not supplied) with 12AWG to 14AWG thickness. Cut the power cable to the length required.

Strip approximately 3/8 of an inch of insulation from the power cable wires.

MECHANICAL

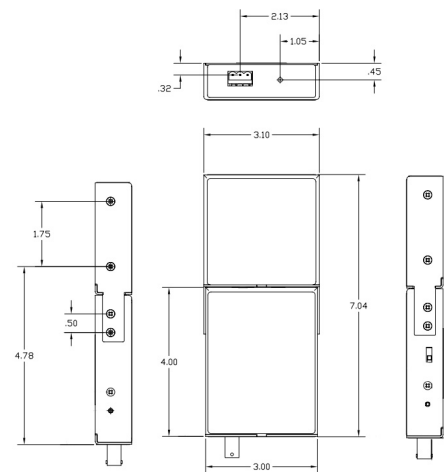

General and Copyright Notice

This publication is protected by U.S. and international copyright laws. All rights reserved. The whole or any part of this publication may not be reproduced, stored in a retrieval system, translated, transcribed, or transmitted, in any form, or by any means, manual, electric, electronic, electromagnetic, mechanical, chemical, optical or otherwise, without prior explicit written permission of Omnitron Systems Technology, Inc.

The following trademarks are owned by Omnitron Systems Technology, Inc.: FlexPoint®, FlexSwitch™, iConverter®, miConverter®, NetOutlook®, OmniLight®, OmniConverter®, RuggedNet®, Omnitron Systems Technology, Inc.™, OST™ and the Omnitron logo.

All other company or product names may be trademarks of their respective owners.

The information contained in this publication is subject to change without notice. Omnitron Systems Technology, Inc. is not responsible for any inadvertent errors.

Warranty

This product is warranted to the original purchaser (Buyer) against defects in material and workmanship for a period of two (2) years from the date of shipment. A lifetime warranty may be obtained by the original purchaser by registering this product at www.omnitron-systems.com/support within ninety (90) days from the date of shipment. During the warranty period, Omnitron will, at its option, repair or replace a product which is proven to be defective with the same product or with a product with at least the same functionality.

For warranty service, the product must be sent to an Omnitron designated facility, at Buyer's expense. Omnitron will pay the shipping charge to return the product to Buyer's designated US address using Omnitron's standard shipping method.

Limitation of Warranty

The foregoing warranty shall not apply to product malfunctions resulting from improper or inadequate use and/or maintenance of the equipment by Buyer, Buyer-supplied equipment, Buyer-supplied interfacing, unauthorized modifications or tampering with equipment (including removal of equipment cover by personnel not specifically authorized and certified by Omnitron), or misuse, or operating outside the environmental specification of the product (including but not limited to voltage, ambient temperature, radiation, unusual dust, etc.), or improper site preparation or maintenance. No other warranty is expressed or implied. Omnitron specifically disclaims the implied warranties of merchantability and fitness for any particular purpose.

The remedies provided herein are the Buyer's sole and exclusive remedies. Omnitron shall not be liable for any direct, indirect, special, incidental, or consequential damages, whether based on contract, tort, or any legal theory.

Connect the ground wire to the ground terminal on the chassis by fastening the stripped end to the DC power connector (ground).

Connect the power cables to the chassis by fastening the stripped ends to the DC power connector.

WARNING: Note the wire colors used in making the positive, negative and ground connections. Use the same color assignment for the connection at the circuit breaker.

Connect the power wires to the circuit breaker and switch the circuit breaker ON. Check the power LED on the back panel of the FlexPoint DC Converter and the front of the media converter. Both power LEDs should be ON.

Environmental Notices

The equipment covered by this manual must be disposed of or recycled in accordance with the Waste Electrical and Electronic Equipment Directive (WEEE Directive) of the European Community directive 2012/19/EU on waste electrical and electronic equipment (WEEE) which, together with the RoHS Directive 2015/863/EU, for electrical and electronic equipment sold in the EU after July 2019. Such disposal must follow national legislation for IT and Telecommunication equipment in accordance with the WEEE directive: (a) Do not dispose waste equipment with unsorted municipal and household waste. (b) Collect equipment waste separately. (c) Return equipment using collection method agreed with Omnitron.

The equipment is marked with the WEEE symbol shown to indicate that it must be collected separately from other types of waste. In case of small items the symbol may be printed only on the packaging or in the user manual. If you have questions regarding the correct disposal of equipment go to www.omnitron-systems.com/support or e-mail to Omnitron at intlinfo@omnitron-systems.com.



SPECIFICATIONS

Regulatory Compliances	Safety:	UL, cUL, CE, UKCA
	EMI:	FCC Class A
	ACT:	TAA, BAA, NDAA
Environmental	RoHS, REACH, WEEE	
Power Requirements	18 to 60VDC	
	0.3A @ 48VDC	
	3 Pin Terminal Connector (Isolated)	
Dimensions W x D x H	3.1" x 4.3" x 1.0"	
	(78.7 mm x 109.2 mm x 25.4 mm)	
Weight	6 oz. (170.1 grams)	
Temperature	Commercial:	0 to 50°C
	Wide:	-40 to 60°C
Humidity	5 to 95% (non-condensing)	
Altitude	-100m to 4,000m	
MTBF (hrs)	300,000	
Warranty	Lifetime warranty with 24/7/365 free Technical Support	

Technical Support:

Phone: (949) 250-6510
 Fax: (949) 250-6514
 Address: Omnitron Systems Technology
 38 Tesla
 Irvine, CA 92618 USA
 E-mail: support@omnitron-systems.com
 URL: <http://www.omnitron-systems.com>

040-04384-001F 7/24

User Warranty Registration
 Please complete both sides and mail or fax this registration form to:
 Omnitron Systems Technology, Inc.
 38 Tesla
 Irvine, CA 92618 USA
 Fax: (949) 250-6514

Name: _____
 Company: _____
 Address: _____
 City: _____ State: _____ Zip Code: _____
 Country: _____
 Phone: _____ Fax: _____
 E-mail: _____

User Warranty Registration
 Please register on-line @ <http://www.omnitron-systems.com> or complete both sides and mail or fax this registration form to:

FlexPoint Type: _____
 Model: _____
 Serial Number: _____ Purchase Date: _____
 Purchased From: _____
 Address: _____
 City: _____ State: _____ Zip Code: _____
 Country: _____
 Comments and Suggestions: _____

Please complete both sides of this form

Please complete both sides of this form