

GENERAL

This user manual support the following models.

Fiber Type and Distance	Connector Types		Tx Lambda	Rx Lambda
	ST	SC	(nm)	(nm)
MM/DF/220m	1220-0-x	1222-0-x	850	850
SM/DF/12km	1221-1-x	1223-1-x	1310	1310
SM/DF/34km	-	1223-2-x	1310	1310
SM/DF/80km	-	1223-3-x	1550	1550
SM/DF/110km	-	1223-4-x	1550	1550
SM/DF/140km	-	1223-5-x	1550	1550
MM/SF/550m	-	1230-0-x	1310	1550
MM/SF/550m	-	1231-0-x	1550	1310
SM/SF/20km	-	1230-1-x	1310	1550
SM/SF/20km	-	1231-1-x	1550	1310
SM/SF/40km	-	1230-2-x	1310	1550
SM/SF/40km	-	1231-2-x	1550	1310
SFP	1239-0-x			
Model numbers are followed by -x, where -x indicates the specific type of power option. See the data sheet for more information.				

DESCRIPTION

The miConverter GX/T is a 10/100/1000BASE-T copper to 1000BASE-X fiber media converter that supports jumbo frames. The GX/T features fixed fiber, 100Mbps and 1000Mbps Small Form Pluggable (SFP) transceivers that support multimode, single-mode and single-mode single-fiber options.


Both the fiber port and the RJ-45 port support auto-negotiation. The auto-negotiation feature can be disabled on both ports (for manual configuration) using DIP-switches on the product.

See data sheet for available models and powering options.

WARNING!


Before inserting the Power Adapter, verify that the power on the unit is appropriate for your AC line voltage source.

DIP-SWITCH SETTINGS

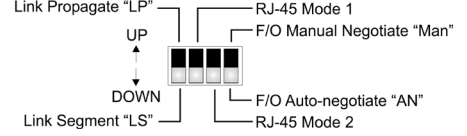

In order to accommodate different user needs, the GX/T supports two different linking modes. In default configuration, the module operates in Link Segment.


Normal Operation

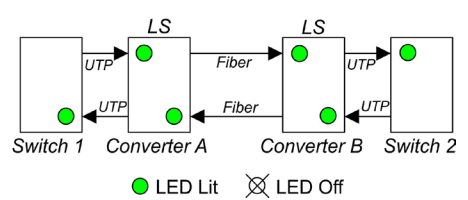

Link Segment/Link Propagate “LS/LP” DIP-switch


Setting the DIP-switch to LS (Link Segment), a port transmits a Link signal independently of any received Link at any other port. For example, the RJ-45 port transmits a Link regardless of the fiber receiving a Link.

Fiber Fault with Link Segment

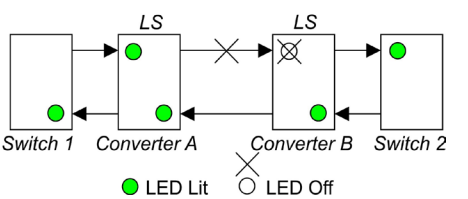

Setting the DIP-switch to LP (Link Propagate), a port transmits a Link signal only when receiving a Link at its other port. For example, the RJ-45 port transmits a Link only when receiving a Link at the fiber port.

Fiber Fault with Link Propagate

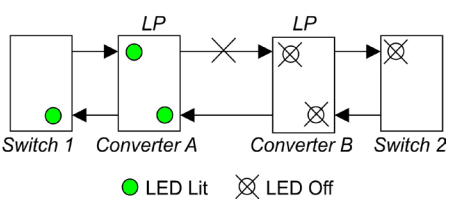

RJ-45 Mode Configuration DIP-Switches

When configured for auto-negotiation, Pause is always advertised. Each port will resolve Pause capability independently during auto-negotiation. If NO Pause is resolved, the port will not send or respond to Pause frames.

Mode 1	Mode 2	RJ-45 Mode of Operation
Down	Down	Port set to auto-negotiation. The following modes are advertised. 1000F, 1000H, 100F, 100H, 10F, 10H, and pause.
Down	Up	Manual Operation - 100 HDX
Up	Down	Manual Operation - 10 FDX
Up	Up	Manual Operation - 100 FDX

F/O Manual/Auto “Man/AN” DIP-Switch

Setting this DIP-Switch to Auto-Negotiate “AN” (factory setting) enables the fiber port to determine duplex mode automatically. If a connection can not be established, the fiber port will automatically attempt to connect to the device by reconfiguring to manual mode.

If the connected device cannot provide the proper signal to indicate its own mode of operation or the fiber port can establish a link after attempting a manual connection, this DIP-Switch should be set to Manual “Man.” This feature allows connections with legacy devices that do not support auto-negotiation.

NOTE: When the fiber port is configured for Manual Mode, a link may not occur with the connected device. Configure both devices to Manual mode to establish a link.

MOUNTING AND CABLE ATTACHMENT

1. The GX/T can be wall mounted using the optional mounting bracket kit (1091-0) or using the included Velcro® strips. Installation of the module should be such that the air flow in the front, back, side and top vents of the switch are not compromised or restricted.

For AC models:

AC power adapter is available in US, Universal and Country/Region specific models. Country/Region specific models feature optional interchangeable connectors, allowing for compatibility with electrical outlet types found around the world.

This product should only be used with Omnitron Supplied Power Unit.

To power the module using the USB cable, connect the USB Standard Type A connector to a USB port on the computer. Then connect the connector at the other end of the cable (barrel connector) to the connector on the back of the miConverter. Confirm that the module has powered up properly by checking the power status LED located on the top of the module.

To power the module using the AC/DC adapter, connect the AC/DC adapter to the AC outlet. Then connect the barrel connector at the end of the cable to the back of the miConverter. Confirm that the module has powered up properly by checking the power status LED located on the top of the module.

For DC models:

To power the unit using a DC power source, prepare a power cable using a two-conductor insulated wire (not supplied). The DC connector can accept a wire thickness up to 12AVG thickness. Cut the power cable to the length required. Strip approximately 3/8 of an inch of insulation from the power cable wires. Connect the power cables to the GX/T unit by fastening the stripped ends to the DC power connector.

Connect the power wires to the DC power source. The Power LED should indicate the presence of power.

WARNING: Note the wire colors used in making the positive and negative connections. Use the same color assignment for the connection at the DC power source.

2. Insert the SFP Fiber transceiver into the SFP receptacle on the GX/T.


NOTE: The release latch of the SFP Fiber transceiver must be in the closed (up) position before insertion.

3. Connect the RJ-45 port via a Category 5 or better cable to a 10BASE-T, 100BASE-TX or 1000BASE-T Ethernet device.

4. When connecting the dual-fiber models, the miConverter transmitter (Tx) must attach to the receiver side of its link partner; the receiver (Rx) must attach to the transmitter.

5. When using single-fiber (SF) media converter models, the Tx wavelength on one end has to match the Rx wavelength on the other. Based on this guideline, the SF media converter models must be used in pairs, such as the 1230-1 matched with the 1231-1.

MECHANICAL

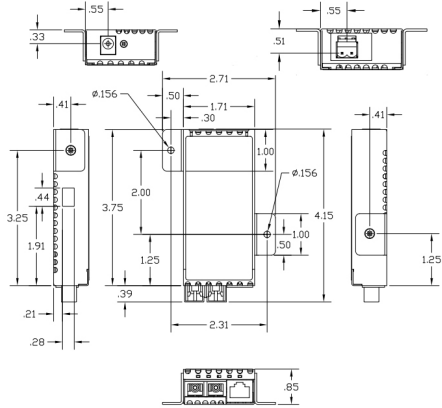

LED INDICATORS

LED	Description
Power “Pwr” Green	OFF: No power ON: Power applied
Fiber Link “F/O” Green	OFF: No fiber link ON: Fiber link at 100Mbps* or 1000Mbps Blinking (1Hz) with AN Solid Green: Energy detected Blinking (10Hz): Data activity
Fiber Negotiation “AN” Green	OFF: Manual mode ON: Auto-negotiation mode Blinking (1Hz): Configured as AN but linked in manual mode
Error Condition “F/O” + “AN” Green	OFF: N/A AN Solid Green with FO Blinking (1Hz): AN error or Remote Fault detected**
RJ-45 Link “100” Green	OFF: No RJ-45 link ON: RJ-45 link at 100Mbps Blinking (10Hz): Data activity
RJ-45 Link “1000” Green	OFF: No RJ-45 link ON: RJ-45 link at 1000Mbps Blinking (10Hz): Data activity
RJ-45 Link “100” + “1000” Green	OFF: No RJ-45 link ON: RJ-45 link at 10Mbps Blinking (10Hz): Data activity

* When 100M SFP transceiver installed

** Remote Fault Detect is only available when 1000M transceivers are installed.

SPECIFICATIONS

Standard Complies	IEEE 802.3
Regulatory Complies	Safety: UL, CE, UKCA EMI: FCC Class A ACT: TAA, BAA, NDAA
Environmental	RoHS, WEEE, REACH
Frame Size	Fixed Fiber Models: Up to 9K bytes SFP Model: Up to 10,240 bytes
Port Types	Copper: 10/100/1000BASE-T (RJ-45) Fiber: 100BASE-X (SFP) 1000BASE-X (ST, SC, SFP) 1000BASE-BX (SC Single-Fiber, SFP)
Cable Types	Copper: EIA/TIA 568A/B, Cat 5 UTP and higher Fiber: Multimode: 50/125µm, 62.5/125µm Single-mode: 9/125µm
AC Power Requirements	AC Adapter: 100 - 240VAC/50 - 60Hz 0.02A @ 120VAC (max)
DC Power Requirements	DC Input: (AC Adapter) 5.0 to 12.0VDC 0.35A @ 5VDC 2.5mm Barrel Connector DC Input: (Terminal) 5.0 to 12.0VDC 0.35A @ 5VDC 2-Pin Terminal Connector
Dimensions W x D x H	1.71" x 4.10" x 0.84" (43.4 mm x 104.1 mm x 21.3 mm)
Weight	Module: 4 oz. (113.4 grams) W/ AC Adapter: 12 oz. (340.2 grams)
Temperature	Commercial: 0 to 50°C -40 to 60°C Extended: -40 to 75°C Industrial: -40 to 85°C Storage: -50 to 85°C
Humidity	5 to 95% (non-condensing)
Altitude	-100m to 4,000m
MTBF (hrs)	Module: 878,000 US AC Adapter: 250,000 Universal AC Adapter: 100,000
Warranty	Lifetime warranty with 24/7/365 free Technical Support

General and Copyright Notice

This publication is protected by U.S. and international copyright laws. All rights reserved. The whole or any part of this publication may not be reproduced, stored in a retrieval system, translated, transcribed, or transmitted, in any form, or by any means, manual, electric, electronic, electromagnetic, mechanical, chemical, optical or otherwise, without prior explicit written permission of Omnitron Systems Technology, Inc.

The following trademarks are owned by Omnitron Systems Technology, Inc.: FlexPoint™, FlexSwitch™, iConverter®, miConverter™, NetOutlook®, OmniLight®, OmniConverter®, RuggedNet®, Omnitron Systems Technology, Inc.™, OST™ and the Omnitron logo.

All other company or product names may be trademarks of their respective owners.

The information contained in this publication is subject to change without notice. Omnitron Systems Technology, Inc. is not responsible for any inadvertent errors.

Warranty

This product is warranted to the original purchaser (Buyer) against defects in material and workmanship for a period of two (2) years from the date of shipment. A lifetime warranty may be obtained by the original purchaser by registering this product at www.omnitron-systems.com/ support within ninety (90) days from the date of shipment. During the warranty period, Omnitron will, at its option, repair or replace a product which is proven to be defective with the same product or with a product with at least the same functionality.

For warranty service, the product must be sent to an Omnitron designated facility, at Buyer's expense. Omnitron will pay the shipping charge to return the product to Buyer's designated US address using Omnitron's standard shipping method.

Limitation of Warranty

The foregoing warranty shall not apply to product malfunctions resulting from improper or inadequate use and/or maintenance of the equipment by Buyer,



Safety Warnings and Cautions



ATTENTION: Observe precautions for handling electrostatic discharge sensitive devices.



WARNING: Potential damage to equipment and personal injury.



WARNING: Risk of electrical shock.

Customer Support Information

Phone: (949) 250-6510

Fax: (949) 250-6514

Address: Omnitron Systems Technology, Inc.

38 Tesla

Irvine, CA 92618, USA

Email: support@omnitron-systems.com

URL: www.omnitron-systems.com